
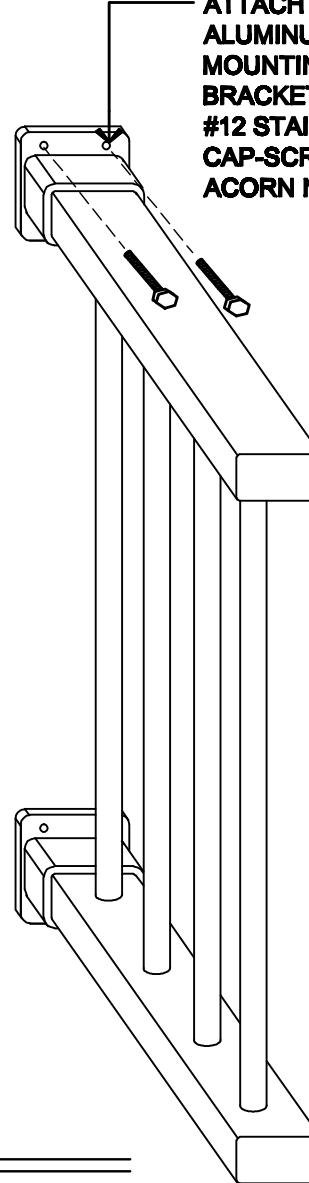
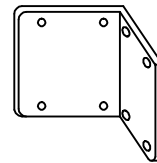


**EXAMPLE ELEVATION**

**USE 3" SCREWS TO  
ATTACH BRKT TO  
WALL SURFACE**

**ALUMINUM  
MOUNTING 90°  
ANGLE BRACKET  
FOR RAIL END  
BRACKETS**

**ATTACH END BRKT TO  
ALUMINUM  
MOUNTING 90° ANGLE  
BRACKET USING  
#12 STAINLESS  
CAP-SCREWS AND  
ACORN NUTS.**

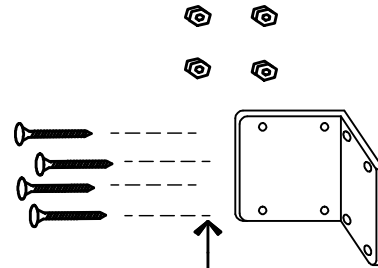

## JULIETTE BALCONY ATTACHMENT - NTS



ATTACH ALUMINUM MOUNTING 90° ANGLE BRACKET TO SURFACE TO WALL USING 3" SCREWS. ATTACH END BRACKET TO ALUMINUM MOUNTING 90° ANGLE BRACKET USING ACORN NUT AND WASHER.

PROJECT  
TECHNOTE

FILE NO.  
000-0-000

4215-A Russell Road  
Mukilteo, WA, 98275  
Main Office 425-348-3808  
Fax 425-348-8476



DRAWN  
CVH

APP'D

SCALE  
1/2" = 1'-0"

DATE  
5/28/2010

**TN-5**

SHEET 5 OF 5